





# BIBBY-STE-CROIX



## Expansion/Contraction Joints

Code		Size	A	B	C	D	E	F	G	H	Weight	
65420	Part A	in. mm	2 50	6 <sup>11</sup> / <sub>16</sub> 170	<sup>13</sup> / <sub>16</sub> 21	2 <sup>1</sup> / <sub>4</sub> 57	1 <sup>29</sup> / <sub>32</sub> 49	2 <sup>3</sup> / <sub>16</sub> 55	2 <sup>13</sup> / <sub>32</sub> 61	<sup>5</sup> / <sub>32</sub> 4	<sup>1</sup> / <sub>4</sub> 6	5.6 lb 2.5 kg
	Part B	in. mm	2 50	6 <sup>13</sup> / <sub>16</sub> 173	5 127	3 76	2 <sup>19</sup> / <sub>32</sub> 63	1 <sup>15</sup> / <sub>16</sub> 49	2 <sup>1</sup> / <sub>4</sub> 57	1 <sup>13</sup> / <sub>32</sub> 36	1 <sup>19</sup> / <sub>32</sub> 41	
65430	Part A	in. mm	3 75	6 <sup>11</sup> / <sub>16</sub> 170	<sup>13</sup> / <sub>16</sub> 21	3 <sup>11</sup> / <sub>32</sub> 85	2 <sup>31</sup> / <sub>32</sub> 75	3 <sup>3</sup> / <sub>16</sub> 81	3 <sup>7</sup> / <sub>16</sub> 87	<sup>1</sup> / <sub>2</sub> 13	<sup>3</sup> / <sub>16</sub> 5	8.7 lb 3.9 kg
	Part B	in. mm	3 75	6 <sup>13</sup> / <sub>16</sub> 173	5 127	4 <sup>1</sup> / <sub>16</sub> 103	3 <sup>1</sup> / <sub>2</sub> 89	2 <sup>21</sup> / <sub>32</sub> 67	3 <sup>11</sup> / <sub>32</sub> 85	1 <sup>13</sup> / <sub>32</sub> 36	1 <sup>19</sup> / <sub>32</sub> 41	
65440	Part A	in. mm	4 100	6 <sup>3</sup> / <sub>4</sub> 172	<sup>13</sup> / <sub>16</sub> 21	4 <sup>3</sup> / <sub>8</sub> 111	3 <sup>15</sup> / <sub>16</sub> 100	4 <sup>3</sup> / <sub>16</sub> 107	4 <sup>9</sup> / <sub>16</sub> 116	<sup>7</sup> / <sub>32</sub> 5	<sup>7</sup> / <sub>64</sub> 3	12.4 lb 5.63 kg
	Part B	in. mm	4 100	6 <sup>3</sup> / <sub>4</sub> 172	5 127	5 <sup>1</sup> / <sub>8</sub> 131	4 <sup>19</sup> / <sub>32</sub> 117	3 <sup>7</sup> / <sub>8</sub> 99	4 <sup>11</sup> / <sub>32</sub> 110	1 <sup>3</sup> / <sub>8</sub> 35	1 <sup>1</sup> / <sub>8</sub> 41	

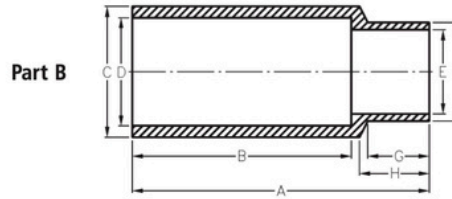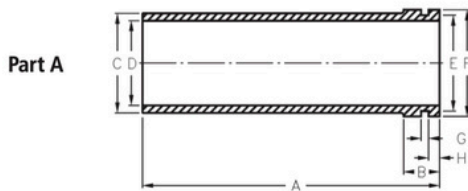

**Note:** Cast Iron has the same expansion and contraction rate as concrete. These fittings are designed to be used for building settlement in wood framed construction.

### Installation instructions

- Travel distance is 1.5" in either direction from centre line.
- Must only be installed with the joint opened to the centre line mark.
- WHEN USED IN HORIZONTAL INSTALLATIONS, IT IS TO BE USED FOR RAIN AND STORM WATER LEADER SYSTEMS ONLY.
- Designed to be hydrostatic tested with the drainage system.

\*For placement and stack support please consult with the authority having jurisdiction.