


## Expansion/Contraction Joints

Code	Size	A	B	C	D	E	F	G	H	Weight	
65420	Part A	in. 2	6 <sup>11</sup> / <sub>16</sub>	1 <sup>3</sup> / <sub>16</sub>	2 <sup>1</sup> / <sub>4</sub>	1 <sup>29</sup> / <sub>32</sub>	2 <sup>3</sup> / <sub>16</sub>	2 <sup>13</sup> / <sub>32</sub>	5 <sup>5</sup> / <sub>32</sub>	1 <sup>1</sup> / <sub>4</sub>	5.6 lb
	mm 50	170	21	57	49	55	61	4	6	2.5 kg	
	Part B	in. 2	6 <sup>13</sup> / <sub>16</sub>	5	3	2 <sup>19</sup> / <sub>32</sub>	1 <sup>15</sup> / <sub>16</sub>	2 <sup>1</sup> / <sub>4</sub>	1 <sup>13</sup> / <sub>32</sub>	1 <sup>19</sup> / <sub>32</sub>	
	mm 50	173	127	76	63	49	57	36	41		
65430	Part A	in. 3	6 <sup>11</sup> / <sub>16</sub>	1 <sup>3</sup> / <sub>16</sub>	3 <sup>11</sup> / <sub>32</sub>	2 <sup>21</sup> / <sub>32</sub>	3 <sup>3</sup> / <sub>16</sub>	3 <sup>7</sup> / <sub>16</sub>	1 <sup>1</sup> / <sub>2</sub>	3 <sup>3</sup> / <sub>16</sub>	8.7 lb
	mm 75	170	21	85	75	81	87	13	5	3.9 kg	
	Part B	in. 3	6 <sup>13</sup> / <sub>16</sub>	5	4 <sup>1</sup> / <sub>16</sub>	3 <sup>1</sup> / <sub>2</sub>	2 <sup>21</sup> / <sub>32</sub>	3 <sup>11</sup> / <sub>32</sub>	1 <sup>13</sup> / <sub>32</sub>	1 <sup>19</sup> / <sub>32</sub>	
	mm 75	173	127	103	89	67	85	36	41		
65440	Part A	in. 4	6 <sup>3</sup> / <sub>4</sub>	1 <sup>3</sup> / <sub>16</sub>	4 <sup>3</sup> / <sub>8</sub>	3 <sup>15</sup> / <sub>16</sub>	4 <sup>3</sup> / <sub>16</sub>	4 <sup>9</sup> / <sub>16</sub>	7 <sup>7</sup> / <sub>32</sub>	7 <sup>1</sup> / <sub>64</sub>	12.4 lb
	mm 100	172	21	111	100	107	116	5	3	5.63 kg	
	Part B	in. 4	6 <sup>3</sup> / <sub>4</sub>	5	5 <sup>1</sup> / <sub>6</sub>	4 <sup>19</sup> / <sub>32</sub>	3 <sup>7</sup> / <sub>8</sub>	4 <sup>11</sup> / <sub>32</sub>	1 <sup>3</sup> / <sub>8</sub>	1 <sup>1</sup> / <sub>6</sub>	
	mm 100	172	127	131	117	99	110	35	41		

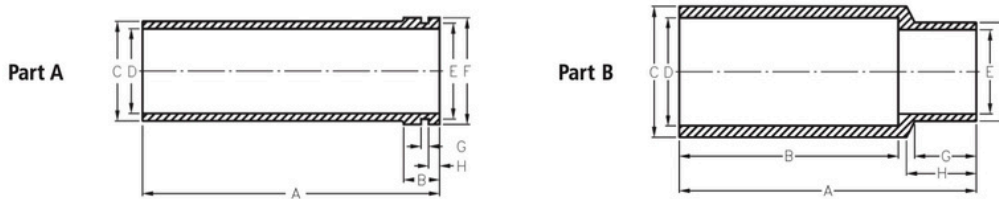

**Note: Cast Iron has the same expansion and contraction rate as concrete. These fittings are designed to be used for building settlement in wood framed construction.**

### Installation instructions

- Travel distance is 1.5" in either direction from centre line.
- Must only be installed with the joint opened to the centre line mark.
- WHEN USED IN HORIZONTAL INSTALLATIONS, IT IS TO BE USED FOR RAIN AND STORM WATER LEADER SYSTEMS ONLY.
- Designed to be hydrostatic tested with the drainage system.

**\*For placement and stack support please consult with the authority having jurisdiction.**